

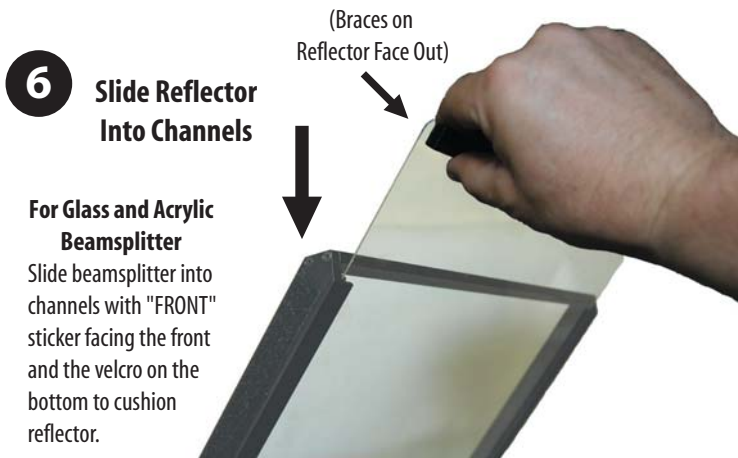
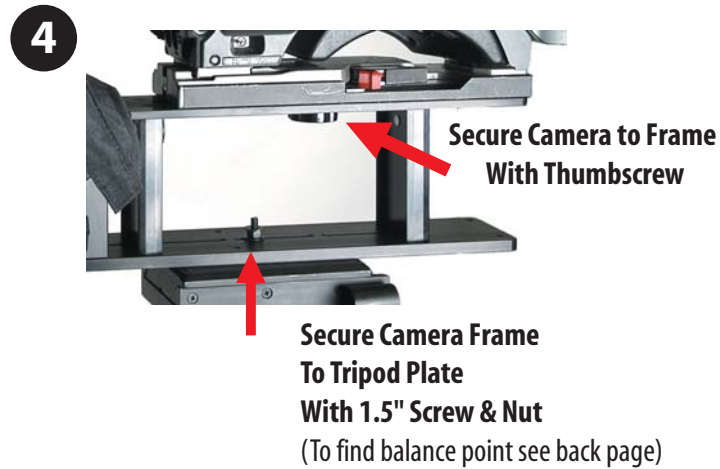


Broadcast 15/17 Setup Guide

(Use the included yellow microfiber cloth to clean the reflector)

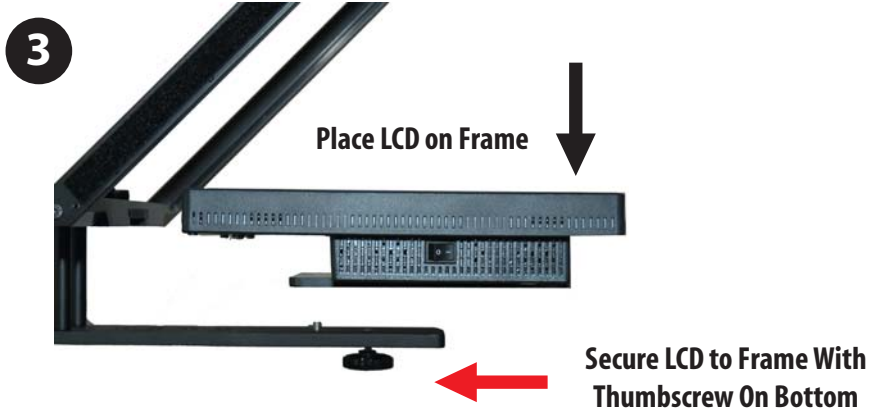


Completed Assembly of Teleprompter With Camera

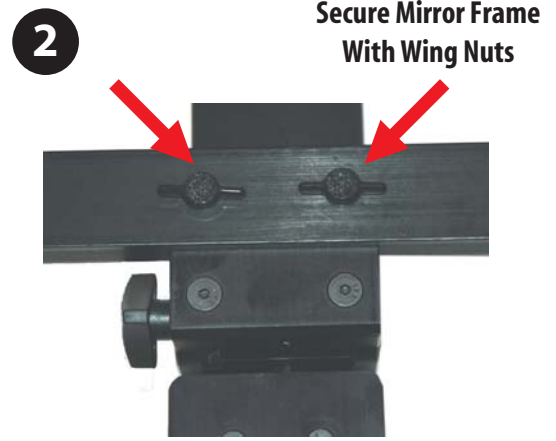

Broadcast Pro 15/17 Setup Guide

Finding Balance Point of Teleprompter

To balance, place pen under unit with camera and all teleprompter parts attached.
Move back and forth to find balance point.
Mark the hole for where the tripod plate attaches.

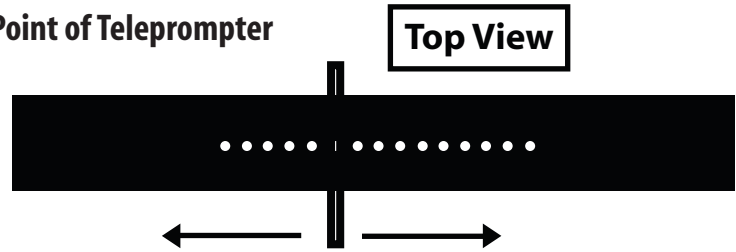


Adjusting Mirror Angle



The tilt knob allow +/- 15 degrees of mirror frame movement
This allows you to adjust the mirror for the talents varying position.

Adjusting Camera Height

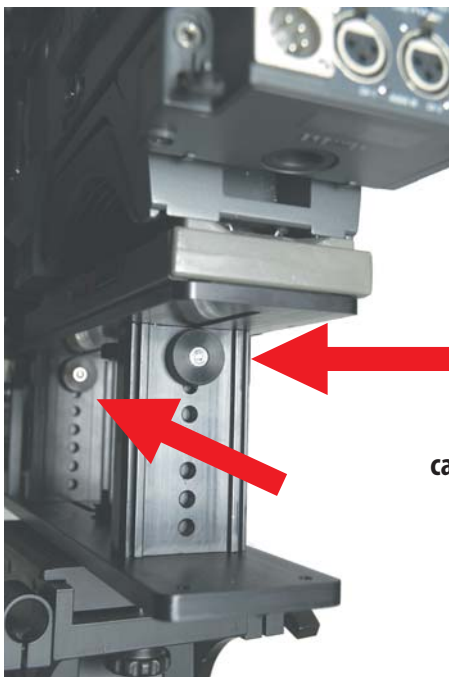

Remove front and rear riser knobs to raise the camera platform up for use with smaller cameras.
You can adjust the camera height within 1/2".

